
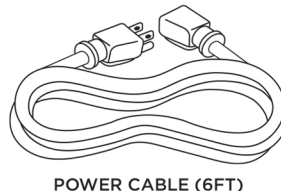
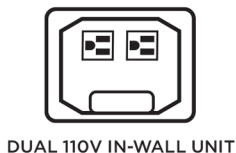
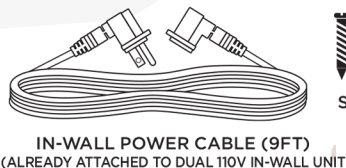




POWER RELOCATION Installation Instructions


ethereal

CELEBRATING
75
YEARS
OF INNOVATION


KIT CONTENTS:

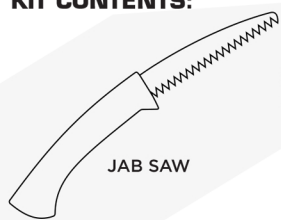


TOOLS NEEDED:

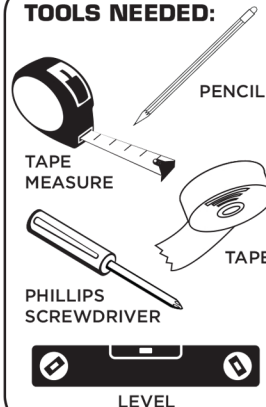


- 1 Check plug size from your TV

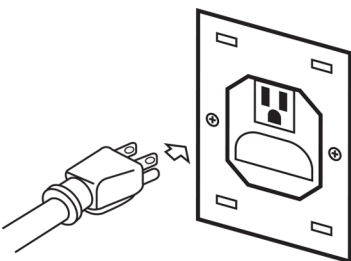




- 2 Center between studs

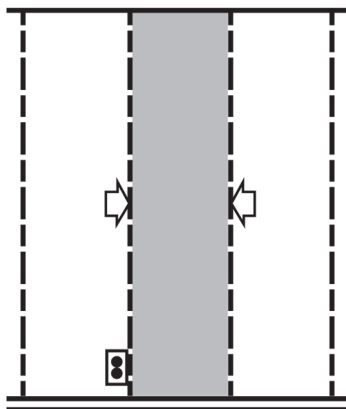



- 3 Measure and mark the location for holes with pencil

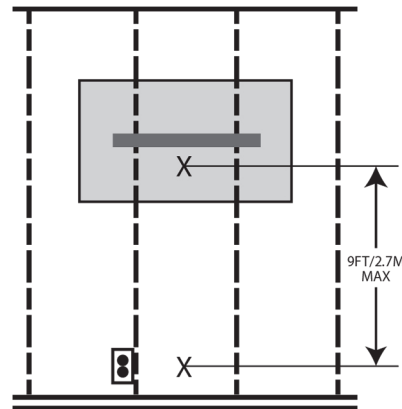

- 4 Cut holes with provided Jab Saw

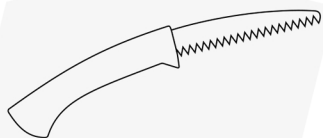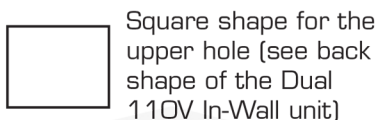

- 5 Use Fish Tape to snake the Dual 110V In-Wall Unit Power Cable into the wall with the **Male Tip at the bottom**. Use tape to secure the Fish Tape if needed.

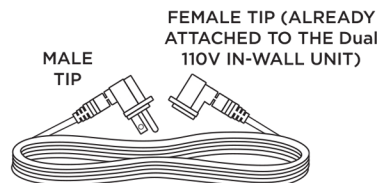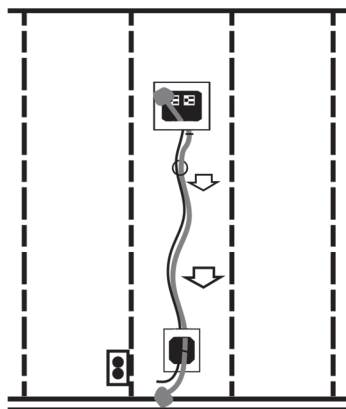

NOTE: Snake any additional AV connection cables at this time. (Coax cable not included)




POWER RELOCATION Installation Instructions


ethereal

CELEBRATING
75
YEARS
OF INNOVATION


- 6** At the bottom, insert Male Tip into the back side of the In-Wall Housing unit.

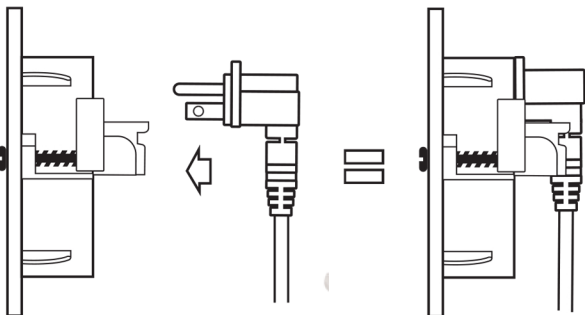


- 7** Snap on Male Crown over the Plug Tip and secure with screws.

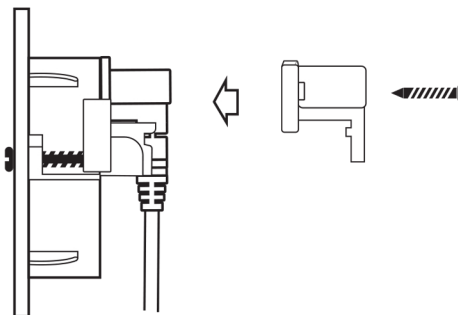


- 8** Fold in Dog Ears and slide Housing into wall. Repeat at the bottom with the Male Housing.

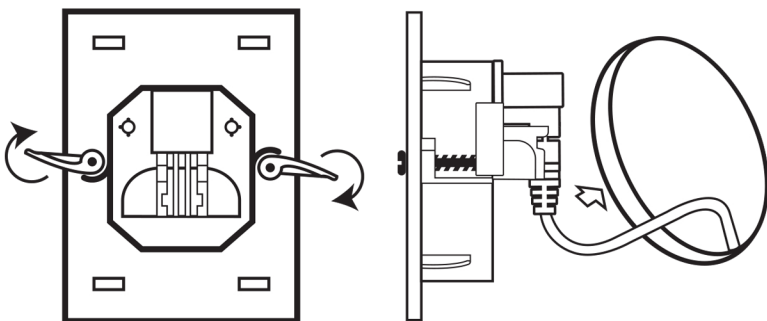

- 9** Level and screw Dog Ears until Housing is secure. Repeat at the bottom with the Male Housing.

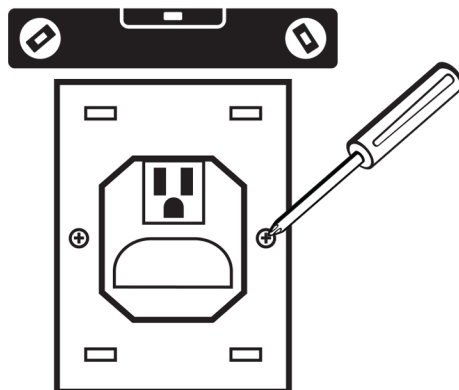

- 10** Snap Housing Fascia onto the front of the Housing. Repeat at the bottom with the Male Housing.

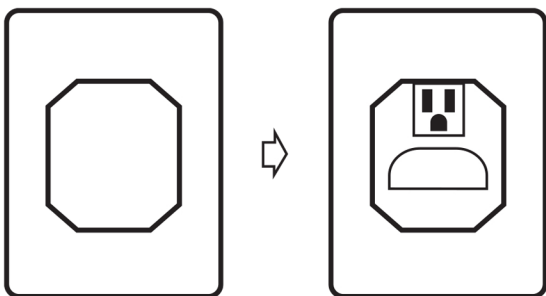

- 11** Plug Extension Cord into the bottom device. Installation is now complete.

